

- **RELEASE 160: SPECIAL FUNCTIONS**



Via Modena 34,  
Correggio Italy  
Tel +39 0522747411  
[www.tecnomotor.it](http://www.tecnomotor.it)

### **PARTICULATE FILTER REGENERATION**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

### **SERVICE RESET**

NISSAN NV 200 MANUAL PROCED. (09-)

### **ESP-STEERING ANGLE ADJUSTMENT**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

### **BRAKES BLEEDING**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

### **Stores vehicle VIN?into ECU - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

### **ECM/PCM reset - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

### **Low pressure EGR valve programming - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)

HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

**Initial learning DPF Differential Pressure Sensor - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

**Reset of Calculated PM Value - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

**MAF Sensor Learning Clear - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

**A/F Sensor 1 Learning Clear - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

**ISV Forced Learning - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

#### **IQA data Writing Cyl.1 - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

#### **IQA data Writing Cyl.2 - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

#### **IQA data Writing Cyl.3 - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

#### **IQA data Writing Cyl.4 - ENGINE**

HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-CDTI (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CIVIC '12 (IX FK) 1.6 I-DTEC (N16A1) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 1.6 I-DTEC 4WD (N16A2) BOSCH EDC (CAN) (12-)  
HONDA DIESEL CR-V '12 (RE) 2.2 I-DTEC 4WD (N22B4) BOSCH EDC (CAN) (12-)  
HONDA DIESEL HR-V '15 (GH) 1.6 I-DTEC (- - -) BOSCH EDC (CAN) (15-)

#### **Adaptation values reset - GEARBOX ELECTRONICS**

HONDA CIVIC '12 (IX FB-FG) A/T (CAN) (12-)  
HONDA CIVIC '12 (IX FK) A/T (CAN) (12-)  
HONDA CIVIC '15 (X FC) A/T (CAN) (15-)  
HONDA CIVIC '16 (X) A/T (CAN) (16-)  
HONDA CR-V '12 (RE) A/T (CAN) (12-)  
HONDA HR-V '15 (GH) A/T (CAN) (15-)  
HONDA JAZZ '15 (IV GK) A/T (CAN) (15-)

**Vehicle tilt sensor calibration - GEARBOX ELECTRONICS**

HONDA CIVIC '12 (IX FB-FG) A/T (CAN) (12-)  
HONDA CIVIC '12 (IX FK) A/T (CAN) (12-)  
HONDA CIVIC '15 (X FC) A/T (CAN) (15-)  
HONDA CIVIC '16 (X) A/T (CAN) (16-)  
HONDA CR-V '12 (RE) A/T (CAN) (12-)  
HONDA HR-V '15 (GH) A/T (CAN) (15-)  
HONDA JAZZ '15 (IV GK) A/T (CAN) (15-)

**Torque setup - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**Transversal acceleration sensor basic position learning - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**Brakes pressure sensor basic position learning - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**Steering wheel angle sensor offset - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**Longitudinal acceleration sensor offset - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**G251 longitudinal accelerator sensor adjust. - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**G200 transversal accelerator sensor adjustm. - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)  
RENAULT ESPACE 5 4CONTROL (16-)

**Enables the uphill start - ABS-TRACTION CONTROL-ESP**

RENAULT ESPACE 5 (16-)

RENAULT ESPACE 5 4CONTROL (16-)

**Initialize all Sensors - ABS-TRACTION CONTROL-ESP**

HONDA CIVIC '12 (IX FB-FG) ABS/VSA (CAN) (12-)

HONDA CIVIC '12 (IX FK) ABS/VSA (CAN) (12-)

HONDA CIVIC '15 (X FC) ABS/VSA (CAN) (15-)

HONDA CIVIC '16 (X) ABS/VSA (CAN) (16-)

HONDA CR-V '12 (RE) ABS/VSA (CAN) (12-)

HONDA HR-V '15 (GH) ABS/VSA (CAN) (15-)

HONDA JAZZ '15 (IV GK) ABS/VSA (CAN) (15-)

**Control unit re-initialization - TIRE PRESSURE CHECK**

RENAULT ESPACE 5 MANUAL PROCED. (16-)

RENAULT ESPACE 5 4CONTROL MANUAL PROCED. (16-)

RENAULT GRAND SCENIC 4 MANUAL PROCED. (16-)

RENAULT KADJAR MANUAL PROCED. (15-)

RENAULT MEGANE 4 (B9A) MANUAL PROCED. (16-)

RENAULT MEGANE 4 GRANDTOUR (K9A) MANUAL PROCED. (16-)

RENAULT SCENIC 4 MANUAL PROCED. (16-)

RENAULT TALISMAN MANUAL PROCED. (16-)

RENAULT TALISMAN SW MANUAL PROCED. (16-)