


A.D.S

AUTOMOTIVE DIAGNOSTIC SERVICES


Connections are as follows:

Ground: Black wire on Record / Playback module to Pin A1 on Black 6 way connector (usually a black wire)

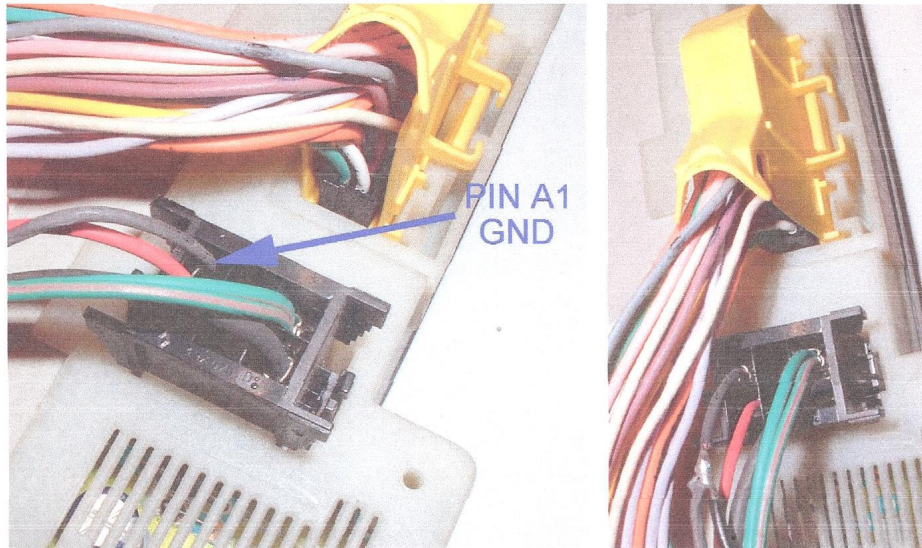


Ignition: Red wire on Record / Playback module to Pin 6 on Yellow 26 way connector (usually a yellow wire)

Notes: There are a number of yellow wires in this plug! Make sure you get the one on cavity 6. Also, it may be better to make the join slightly further away from the connector, so that when the joint is taped-up, the yellow hood will still go on.

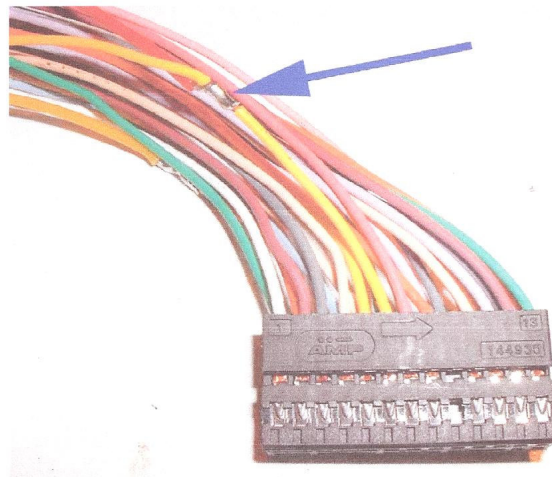


Data: Yellow wire on Record / Playback module to Pin 15 on Yellow way connector (usually an orange wire)

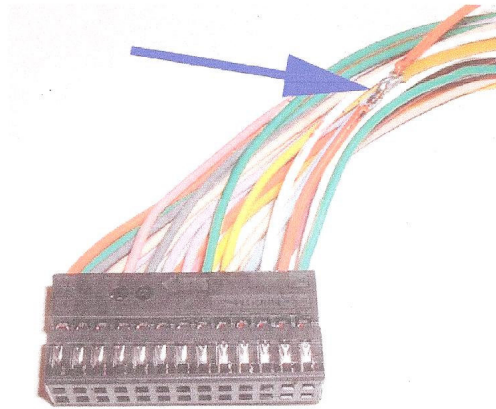

Once the PIN Code has been entered successfully, and the green light has come on on the Record / Playback module, it can then be put into Playback mode. See the General RPM datasheet for details.

Also the Data wire, to the engine ECU should be cut where it enters the Body Control Unit

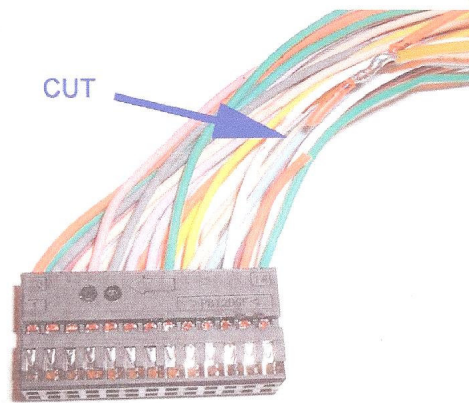

Finally, if you wish to disable the red security LED on the dashboard, you need to cut the wire to pin 24 of the connector above. It's usually white, but again see the note below.

Note: It's always's best to work on terninal numbers rather than wire colours when fitting this device. The wire colours on the Renault wiring harness in the photos are for guidance only. Renault never specify wire colours, which means they're likely to change.

A.D.S is not to be held responsible for the incorrect installation of any of these products or for damages of any type seen after the installation.

These types of products are to be fitted by qualified persons only