

# A.D.S

## AUTOMOTIVE DIAGNOSTIC SERVICES

### Fitting The Record / Playback Module to Megane Post 99MY Models

Version 1


**Applicable to:** *Megane and Scenic models 99 Model Year to 2003  
I.E. Megane 1 Phase 2, with crypto transponder keys  
NOT the version with card key.*

**Note:** *The process described here is only effective if you can get the vehicle to start at least once using the existing key. It is not suitable for lost key situations.*

*These models have an 8 digit PIN. This PIN will only allow the programming of new keys to the vehicle. It will not give an emergency start. Additionally, there is no unique number inside the key from which the PIN can be calculated.*

### General


The Record / Playback Module (RPM) needs to be fitted at the back of the Interior UCH / Body Control Unit. This is mounted on the right hand side of the steering column, in a cradle. Vehicles of this type can be recognised by the blue surround to the upper rows of fuses:

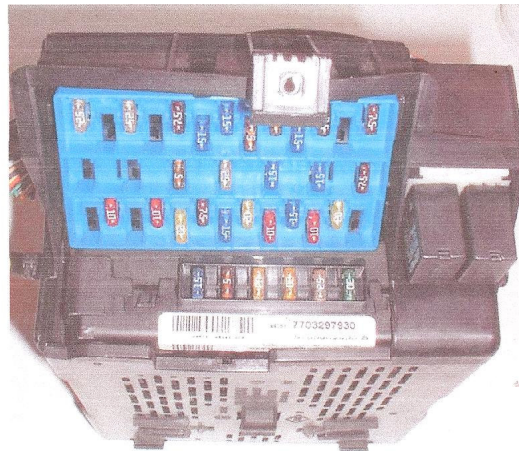

Connection points are as follows:


### Ignition and Ground


These need to be made to connector PP1, an 8 way black connector, as shown

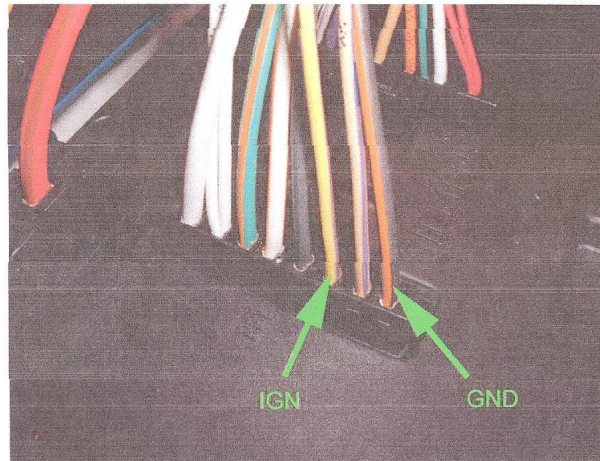

### Data To Engine ECU

Pin 16 on connector PE3, 30 pin grey lever connector.

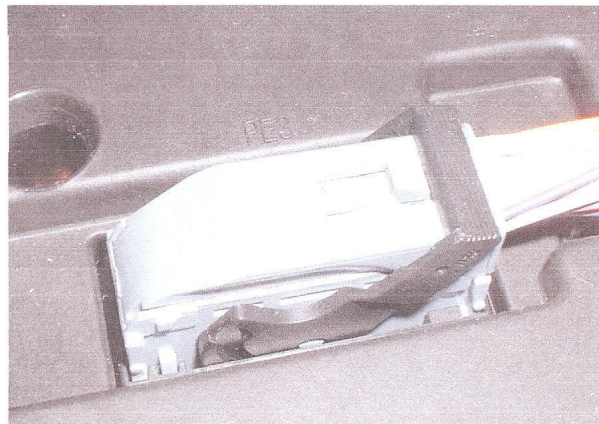

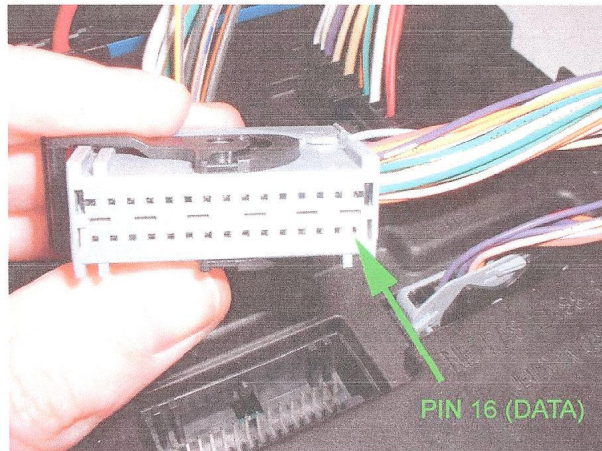

**Notes:**

*You may also want to cut the wire to the red security LED, to stop it flashing and causing a distraction whilst driving. This is connected to Pin 20 of the same 30 way grey connector.*

*The wire colours on the Renault wiring harness in the photos are for guidance only. Renault never specify wire colours, which means they're likely to change.*

A.D.S is not to be held responsible for the incorrect installation of any of these products or for damages of any type seen after the installation.

These types of products are to be fitted by qualified persons only